

if there, lift out the frame. To replace frame, locate the two upright points of the frame in their respective slots at the back of the rear retainer; then, snap the front of the frame down into latched position.



TO REMOVE LID FROM CASE

With lid approximately vertical, press back both the right and left hinge latches; unhook the hinges, and the lid is free. To replace this lid, rehook the two halves of both hinges; push the hinge sections together with a little pressure and the hinge latches snap into a secured position.

DIRT-RESISTANT!

The "Holiday" Carrying Case has a non-porous surface which resists staining. If it should become soiled, dirt can easily be sponged off the surface with mild soap and water.

Smith-Corona *Electric*

"holiday"

CARRYING CASE

brings you

- **NEW** beauty and styling
- **NEW** ease of handling
- **NEW** all-around satisfaction

TO REMOVE TYPEWRITER FROM THE ALL-NEW "HOLIDAY" CARRYING CASE



Place carrying case on desk or table with small part of case on the bottom. Open case by press-

ing double safety lock. Then remove portable typewriter as follows:

Push back the machine release button. You will note that the typewriter is automatically released, at the front. Lift the front of the machine up two or three inches; pull it forward and out of the case.

TO REPLACE TYPEWRITER IN THE CASE

Center the carriage, using the centering device as indicated in your instruction booklet. Pick up your typewriter with both hands, holding the front end of the machine about three inches higher than the back

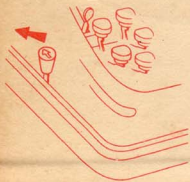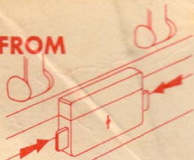

end. Keep your hands well forward on the machine and you will find adequate finger room between the case sides and the sides of the machine. Insert the machine into the case, making sure that the two-pronged cleat at the back of the case enters the double rectangular opening on the back of the machine. When the rear of the machine is positively on the rear holding cleats, the front of the machine will line up with the front holding cleat; then, push the front of the machine down so as to latch the machine on the front cleat. Check to see if this is secure by lifting up the front end of the typewriter.

TO REMOVE FASTENING FRAME FROM CASE

The metal frame which holds the portable typewriter in place can be removed. Simply push the frame release lever to the right; holding

